




Sphero Block Tool Instructions

To insert the sphere of the attachment onto the tool:

• Push the small piston down, on the opposite side, hexagonal pliers will emerge

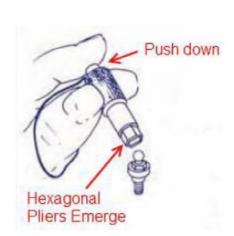



• Insert the sphere into the tool. The sphere will bypass the "loose" hexagonal pliers. Make sure that the hexagonal pliers are correctly oriented around the hex underneath the sphere.




• Pushing the external part of the tool down, the hexagonal pliers closes and holds the attachment

800-232-7732 preat.com



• The tool has a .050 hex on top. Use any .050 driver with your torque wrench to torque the abutments into place. 25ncm is recommended.

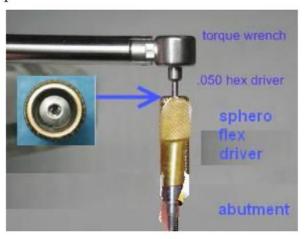

800-232-7732 preat.com